



Contents

00 - Technical data	1
1 Safety instructions	1
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working on fuel supply system	2
1.3 Safety precautions during road tests in which test and measuring equipment is used	3
1.4 Safety precautions when working on cooling system	3
2 Identification	4
2.1 Engine number, engine data	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and securing lines	5
3.5 Installing coolers, condensers and radiators	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Securing engine to workshop hoist	20
1.3 Installing engine	21
1.4 Separating engine and gearbox	22
2 Assembly mountings	32
2.1 Assembly overview - assembly mountings	32
2.2 Removing and installing console for engine mounting	33
2.3 Removing and installing engine mountings	34
2.4 Removing and installing console for gearbox mounting	36
2.5 Removing and installing gearbox mounting	37
13 - Crankshaft group	40
1 Cylinder block (pulley end)	40
1.1 Assembly overview - cylinder block, pulley end	40
1.2 Removing and installing vibration damper	40
1.3 Renewing crankshaft oil seal - belt pulley end	42
1.4 Removing and installing engine support	43
2 Cylinder block, gearbox end	45
2.1 Assembly overview - cylinder block, gearbox end	45
2.2 Removing and installing sealing flange on gearbox side	45
3 Crankshaft	53
3.1 Assembly overview - crankshaft	53
3.2 Crankshaft dimensions	54
3.3 Measuring axial clearance of crankshaft	54
4 Pistons and conrods	56
4.1 Assembly overview - pistons and conrods	56
4.2 Removing and installing pistons	57
4.3 Separating new conrod	58
4.4 Measuring piston projection at TDC	58
15 - Cylinder head, valve gear	61
1 Cylinder head	61
1.1 Assembly overview - cylinder head	61
1.2 Removing and installing cylinder head	62
2 Toothed belt drive	66



2.1	Assembly overview - toothed belt	66
2.2	Removing and installing toothed belt guard	66
2.3	Removing and installing toothed belt	70
2.4	Adjusting valve timing	73
3	Valve gear	76
3.1	Assembly overview - valve gear	76
3.2	Removing and installing camshaft module	77
3.3	Removing and installing camshaft adjuster	79
17	- Lubrication	84
1	Sump, oil pump	84
1.1	Assembly overview - sump and oil pump	84
1.2	Removing and installing oil level and oil temperature sender G266	86
1.3	Removing and installing lower part of sump	86
1.4	Removing and installing upper part of sump	89
1.5	Removing and installing oil pump	91
1.6	Engine oil	91
1.7	Clearing oil warning display	92
2	Oil filter, oil pressure switch	94
2.1	Assembly overview - oil filter housing, oil pressure switch	94
2.2	Assembly overview - oil filter	95
2.3	Removing and installing oil filter housing	95
2.4	Removing and installing oil pressure switch F1	96
2.5	Removing and installing oil pressure regulating valve N428	96
3	Oil circuit	98
3.1	Removing and installing oil supply line/oil return line	98
19	- Cooling	100
1	Cooling system, coolant	100
1.1	Coolant hose schematic diagram	100
1.2	Overview of fitting locations - coolant hoses	103
1.3	Draining and filling coolant	105
1.4	Checking cooling system for leaks	112
2	Coolant pump, regulation of cooling system	115
2.1	Assembly overview - coolant pump, thermostat	115
2.2	Assembly overview - coolant temperature sender	116
2.3	Assembly overview - electric coolant pump	116
2.4	Removing and installing coolant pump	118
2.5	Removing and installing thermostat	120
2.6	Removing and installing switch valve for mechanical coolant pump N649 for cylinder head	120
2.7	Removing and installing coolant temperature sender G62	120
2.8	Removing and installing engine temperature sender G407	121
3	Coolant pipes	122
3.1	Assembly overview - coolant pipes	122
3.2	Removing and installing coolant pipes	122
4	Radiator and radiator fan	129
4.1	Assembly overview - radiator	129
4.2	Assembly overview - radiator cowl and radiator fan	130
4.3	Assembly overview - air duct	131
4.4	Removing and installing radiator	131
4.5	Removing and installing radiator cover	134
4.6	Removing and installing regulating valve for cooling air flaps N648	138
4.7	Removing and installing temperature sender 1 for engine compartment, 160°C G242	141
5	Adapter cable for coolant shortage indicator	142



5.1	Installing adapter cable for coolant shortage indicator	142
20	Fuel supply system	148
1	Fuel cooler	148
1.1	Assembly overview - fuel cooler	148
2	Fuel tank	149
2.1	Assembly overview - fuel tank	149
2.2	Removing and installing fuel tank	149
3	Fuel delivery unit and fuel gauge sender	151
3.1	Assembly overview - fuel delivery unit and fuel gauge sender	151
4	Fuel filter	152
4.1	Removing and installing fuel filter	152
5	Accelerator mechanism	153
5.1	Assembly overview - accelerator module	153
5.2	Removing and installing accelerator module GX2 with accelerator position sender G79 / G185	154
6	Fuel pump	155
6.1	Removing and installing fuel pump control unit J538	155
21	Turbocharging/supercharging	157
1	Turbocharger	157
1.1	Assembly overview - turbocharger	157
1.2	Removing and installing turbocharger	158
2	Charge air system	161
2.1	Assembly overview - charge air system	161
2.2	Removing and installing charge air cooler	162
2.3	Removing and installing charge pressure sender G31	165
2.4	Removing and installing charge air temperature sender ahead of charge air cooler G810	165
2.5	Removing and installing charge air temperature sender after charge air cooler G811	166
2.6	Removing and installing charge air pipe	166
23	Mixture preparation - injection	168
1	Injection system	168
1.1	Overview of fitting locations - injection system	168
1.2	Checking fuel system for leaks	169
1.3	Filling and bleeding fuel system	169
2	Vacuum system	171
2.1	Schematic diagram - vacuum system	171
2.2	Testing vacuum system	171
3	Injectors and fuel rail	173
3.1	Assembly overview - injectors	173
3.2	Assembly overview - fuel rail	174
3.3	Removing and installing injectors	175
3.4	Removing and installing high-pressure lines	177
3.5	Removing and installing fuel rail	178
3.6	Adapting correction values for injectors	179
4	Air filter	181
4.1	Assembly overview - air filter housing	181
4.2	Removing and installing air filter housing	181
5	Intake manifold	184
5.1	Assembly overview - intake manifold	184
5.2	Removing and installing intake manifold	184
5.3	Removing and installing throttle valve module J338	184



6	Senders and sensors	187
6.1	Removing and installing fuel pressure regulating valve N276	187
6.2	Removing and installing fuel pressure sender G247	188
6.3	Removing and installing pressure differential sender G505	188
6.4	Pressure differential sender 2 G524	190
6.5	Removing and installing air mass meter G70	192
7	Engine control unit	194
7.1	Removing and installing engine control unit J623	194
8	High-pressure pump	197
8.1	Assembly overview - high-pressure pump	197
8.2	Removing and installing high-pressure pump	198
9	Lambda probe	200
9.1	Assembly overview - Lambda probe	200
26 - Exhaust system		202
1	Exhaust pipes, silencers	202
1.1	Assembly overview - silencers	202
1.2	Removing and installing rear silencer	203
2	Emission control	208
2.1	Assembly overview - emission control	208
2.2	Removing and installing particulate filter	209
3	Exhaust gas temperature regulation	213
3.1	Assembly overview - exhaust gas temperature regulation	213
4	Exhaust gas recirculation	215
4.1	Assembly overview - exhaust gas recirculation	215
4.2	Removing and installing exhaust gas recirculation cooler	216
4.3	Removing and installing exhaust gas recirculation pipe	218
4.4	Removing and installing exhaust gas recirculation valve	219
5	Exhaust manifold	220
5.1	Assembly overview - exhaust manifold	220
5.2	Removing and installing exhaust manifold	220
28 - Glow plug system		223
1	Glow plug system	223
1.1	Assembly overview - glow plug system	223
1.2	Removing and installing glow plugs Q35 / Q36	224
1.3	Removing and installing automatic glow period control unit J179	225
1.4	Removing and installing Hall sender G40	226
1.5	Removing and installing engine speed sender G28	227