

001 - Earthing concept	1-14
1. Earthing concept	1
2. Earth connection 1, in main wiring harness, Earth connection 7, in main wiring harness, Earth connection 8, in main wiring harness, Earth point 2 on rear left longitudinal member	2
3. Earth connection 1, in main wiring harness, Earth connection 2, in main wiring harness, Earth connection 6, in main wiring harness, Earth connection 8, in main wiring harness	3
4. Earth connection 2, in main wiring harness, Earth connection 5, in main wiring harness, Earth connection 6, in main wiring harness, Earth point, on top end of steering column	4
5. Earth connection 2, in main wiring harness, Earth connection 3, in main wiring harness, Earth connection 4, in main wiring harness	5
6. Earth connection 4, in main wiring harness, Earth connection 10, in main wiring harness, Earth connection 11, in main wiring harness, Earth point 3 on rear left longitudinal member	6
7. Earth connection, in rear lid wiring harness, Earth connection 11, in main wiring harness, Earth point on fuel tank	7
8. Earth connection, in rear lid wiring harness, Earth connection 11, in main wiring harness, Earth connection, on fuel tank filler neck	8
9. Battery, Earth point, on left in engine compartment, Earth connection 1, in ABS wiring harness, Earth connection 2, in front wiring harness, Earth connection 12, in main wiring harness, Earth point 1, on front of left longitudinal member	9
10. Earth connection 16, in main wiring harness, Earth connection 20, in main wiring harness, Earth point 2, on front of left longitudinal member	10
11. Earth connection 16, in main wiring harness, Earth connection 17, in main wiring harness, Earth connection 18, in main wiring harness, Earth connection 19, in main wiring harness	11
12. Earth connection 18, in main wiring harness, Earth connection 21, in main wiring harness, Earth connection 23, in main wiring harness	12
13. Earth connection 18, in main wiring harness, Earth connection 22, in main wiring harness, Earth connection 24, in main wiring harness, Earth connection 26, in main wiring harness	13
14. Earth point, on rear of left longitudinal member, Earth point, on lower left of engine block, Earth point 3, on front of left longitudinal member, Earth point 1 on rear left longitudinal member, Earth point 4 on rear left longitudinal member, Earth point 1 for power and control electronics for electric drive, Earth point 2 for power and control electronics for electric drive, Earth point 1, on high-voltage battery	14
002 - Fuse assignment	15-31
1. Fuse assignment	15
2. Battery, Fuse 1 in fuse holder A, Fuse 3 in fuse holder A, Fuse holder B	16
3. Fuse holder B, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B	17
4. Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder B	18
5. Fuse holder C	19
6. Fuse holder C	20
7. Fuse holder C, Fuse holder D	21
8. Fuse holder D	22
9. Fuse holder D	23
10. Fuse holder D	24
11. Fuse holder D	25
12. Fuse holder D, Fuse holder F	26
13. Fuse holder F	27
14. Fuse holder F	28
15. Fuse holder F	29
16. Fuse holder F	30
17. Fuse holder F	31
003 - Data bus network	32-40
1. Data bus network	32
2. Data bus diagnostic interface	33
3. Data bus diagnostic interface	34
4. Data bus diagnostic interface	35
5. Data bus diagnostic interface	36
6.	37
7. Onboard supply control unit	38
8. Diagnostic connection	39
9. Connection 1 (hybrid CAN bus, high) in main wiring harness	40
004 - Dual clutch gearbox (DSG)	41-45
1. Dual clutch gearbox (DSG)	41
2. Mechatronic unit for dual clutch gearbox	42
3. Mechatronic unit for dual clutch gearbox	43
4. Selector lever	44
5. Selector lever. Selector lever locked in position P switch. Selector lever lock solenoid.	45

Selector lever position display	
005 - 0.8l diesel engine , CSCA	46-63
1. 0.8l diesel engine , CSCA	46
2. Engine control unit	47
3. Engine control unit	48
4. Engine control unit	49
5. Accelerator pedal module, Air mass meter, Vacuum sender, Engine control unit	50
6. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine control unit	51
7. Charge pressure sender, Pressure differential sender, Pressure differential sender 2, Engine control unit	52
8. Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine control unit	53
9. Exhaust gas temperature sender 1, Engine compartment temperature sensor 1, 160 °C, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine control unit	54
10. Automatic glow period control unit, Engine control unit, Glow plug 1 with pressure sensor, Glow plug 2 with pressure sensor	55
11. Throttle valve module, Engine control unit, Injector, cylinder 1, Injector, cylinder 2	56
12. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine control unit	57
13. Ambient temperature sensor, Fuel temperature sender, Fuel pressure sender, Engine temperature sender, Exhaust gas temperature sender 2, Engine control unit	58
14. Hall sender, Engine control unit, Circulation pump, Turbocharger 1 control motor	59
15. Engine control unit, Changeover valve, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Switch valve for mechanical coolant pump	60
16. Engine control unit, Circulation pump 2, Circulation pump 3	61
17. Brake pedal switch, Fuel delivery unit, Fuel pump control unit, Engine control unit	62
18. Fuel delivery unit, Terminal 30 voltage supply relay, Vacuum pump relay, Engine control unit	63
006 - Radiator fan	64-65
1. Radiator fan	64
2. Cooling fan control unit, Cooling flaps pressure valve, Radiator fan, Engine compartment cooling fan	65
007 - High voltage system	66-89
1. High voltage system	66
2. Battery regulation control unit	67
3. Battery regulation control unit	68
4. Battery regulation control unit, Electrical air conditioner compressor, High-voltage heater (PTC)	69
5. Battery regulation control unit, High-voltage battery power contactor 2	70
6. Battery regulation control unit, High-voltage battery power contactor 1, High-voltage system fuse 2, High-voltage system fuse 3	71
7. Current sensor for high-voltage battery, Battery regulation control unit, Protection resistor for high-voltage battery, High-voltage system fuse 1	72
8. Battery monitor control unit, Battery regulation control unit, Battery module 0	73
9. Battery monitor control unit, Battery monitor control unit 2, Battery module 1, Battery module 0	74
10. Battery monitor control unit 2, Battery module 1	75
11. Battery module 2, Battery monitor control unit 3	76
12. Battery module 2, Battery module 3, Battery monitor control unit 3, Battery monitor control unit 4	77
13. Battery module 3, Battery monitor control unit 4	78
14. Battery module 4, Battery monitor control unit 5	79
15. Battery module 4, Battery module 5, Battery monitor control unit 5, Battery monitor control unit 6	80
16. Power and control electronics for electric drive, Battery module 5, Battery monitor control unit 6	81
17. Power and control electronics for electric drive, Terminal 30 relay	82
18. Drive motor rotor position sender 1, Power and control electronics for electric drive, Three-phase current drive	83
19. Power and control electronics for electric drive, Charge voltage control unit for high-voltage battery, High-voltage charge current distributor, High-voltage battery charging connection 1, Three-phase current drive	84
20. Charge voltage control unit for high-voltage battery, High-voltage battery charging connection 1	85
21. Charge voltage control unit for high-voltage battery, High-voltage battery charging connection 1	86
22. Charge voltage control unit for high-voltage battery	87
23. Charge voltage control unit for high-voltage battery, Enable relay for high-voltage charging socket, Charge enable relay, Pilot line connector 1	88
24. Actuator for high-voltage charging flap lock 1. Onboard supply control unit. Circulation pump 5	89

008 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	90-95
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	90
2. Brake servo pressure sensor, ABS control unit	91
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	92
4. ABS control unit, Left parking brake motor, Right parking brake motor	93
5. Electromechanical parking brake button, Auto-hold button, ABS control unit	94
6. ABS control unit, Control unit in dash panel insert	95
009 - Climatic	96-103
1. Climatic	96
2. High-pressure sender, Air conditioning system relay, Air conditioning system control unit	97
3. Air conditioning system control unit, Refrigerant shut-off valve for heater and air conditioner unit, Refrigerant shut-off valve for high-voltage battery heat exchanger, Circulation pump 4, Electrical air conditioner compressor	98
4. Centre vent temperature sender, Footwell vent temperature sender, Evaporator temperature sensor, Air conditioning system control unit	99
5. Air conditioning system control unit, Temperature flap control motor, Defroster flap control motor, Front air distribution flap control motor	100
6. Air conditioning system control unit, Fresh air blower relay, 2nd speed, Fresh air blower series resistor with overheating fuse, Fresh air blower	101
7. Fresh air blower relay, Air conditioning system control unit	102
8. High-voltage heater (PTC)	103
010 - Basic equipment	104-123
1. Basic equipment	104
2. Onboard supply control unit	105
3. Onboard supply control unit	106
4. Onboard supply control unit, Front left headlight, Front right headlight	107
5. Rotary light switch, Onboard supply control unit	108
6. Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	109
7. Onboard supply control unit, Left tail light, Right tail light	110
8. Onboard supply control unit, Centre rear tail light unit, Rear lid lock unit	111
9. Hazard warning light switch, Onboard supply control unit, High-level brake light bulb	112
10. Onboard supply control unit, Driver door lock unit, Front passenger door lock unit	113
11. Onboard supply control unit, Steering column electronics control unit	114
12. Turn signal switch, Intermittent wiper switch, Onboard supply control unit, Steering column electronics control unit	115
13. Onboard supply control unit, 12 V socket, Washer pump, Tank filler flap locking motor, Front interior light	116
14. Onboard supply control unit, Centre operating unit for dash panel	117
15. Onboard supply control unit, Operating range display control unit	118
16. Terminal 15 voltage supply relay, Onboard supply control unit, Wiper park position heater relay, Terminal 75 voltage supply relay 1, Heater for parked wiper	119
17. Treble horn, Wiper motor control unit, Onboard supply control unit	120
18. Washer fluid warning contact, Coolant shortage indicator sender, Coolant shortage indicator sender 2, Control unit in dash panel insert	121
19. Immobiliser reader coil, Brake fluid level warning contact, Fuel gauge sender, Ambient temperature sender 2, Control unit in dash panel insert	122
20. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	123
011 - Digital exterior mirrors	124-130
1. Digital exterior mirrors	124
2. Digital exterior mirror control unit 1	125
3. Digital exterior mirror control unit 1, Loudspeaker for left digital exterior mirror	126
4. Digital exterior mirror control unit 1, Camera for left digital exterior mirror, Display unit for left digital exterior mirror	127
5. Digital exterior mirror control unit 2	128
6. Digital exterior mirror control unit 2, Loudspeaker for right digital exterior mirror	129
7. Digital exterior mirror control unit 2, Camera for right digital exterior mirror, Display unit for right digital exterior mirror	130
012 - Parking aid (PDC)	131-133
1. Parking aid (PDC)	131
2. Parking aid control unit, Parking aid loudspeaker	132
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	133
013 - Entry and start authorisation	134-137
1. Entry and start authorisation	134

2. Entry and start authorisation control unit, Interior aerial 1 for entry and start system	135
3. Starter button, Entry and start authorisation control unit, Control unit for electronic steering column lock	136
4. Control unit for electronic steering column lock	137
014 - Radio system	138-142
1. Radio system	138
2. Radio	139
3. Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range and bass loudspeaker, Front right mid-range and bass loudspeaker	140
4. Portable navigation and infotainment system, Radio	141
5. Radio, Window aerial	142
015 - Telematics	143-146
1. Telematics	143
2. Telematics control unit	144
3. Telematics control unit	145
4. Telematics control unit, Additional aerial for telematics	146
016 - Airbag systems	147-155
1. Airbag systems	147
2. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	148
3. Driver side belt switch, Coil connector, Front airbag crash sensor for driver side, Airbag control unit, Driver side airbag igniter	149
4. Airbag control unit, Control unit in dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	150
5. Emergency exit control unit	151
6. Emergency exit control unit, Left igniter capsule, Right igniter capsule	152
7. Emergency exit control unit, Igniter for front left emergency exit, Igniter for front right emergency exit, Front left igniter capsule 2, Front right igniter capsule 2	153
8. Driver exterior door handle, Front passenger exterior door handle, Front left door opener release switch, Front right door opener release switch, Emergency exit control unit	154
9. Blocking diode, Blocking diode 2, Blocking diode 3, Blocking diode 4, Emergency exit control unit	155
017 - Telematics	156-159
1. Telematics	156
2. Data recorder	157
3. Data recorder	158
4. Data recorder, Additional aerial for telematics	159
801 - -Fitting locations: Earth points - 3	160-166
1. Earth points	160-166
1.1 Overview of earth points	160-166
802 - -Fitting locations: Fuses - 3	167-181
1. Fuses	167-181
1.1 Overview of fuse holder	167
1.2 Fitting location fuse holder D -SD-	168
1.3 Fuse assignment on fuse holder D -SD-	169
1.4 Fitting location fuse holder F -SF-	170
1.5 Fuse assignment on fuse holder F -SF-	171-172
1.6 Fitting location of charging unit fuse -S60- and glow plug fuse -S125-	173-174
1.7 Fitting location fuse holder B -SB-	175
1.8 Fuse assignment fuse holder B -SB-	176
1.9 Fitting location fuse holder A -SA-	176
1.10 Fuse assignment fuse holder A -SA-	177-178
1.11 Fitting location fuse holder C -SC-	179
1.12 Fuse assignment fuse holder C -SC-	180-181
803 - -Fitting locations: Relays - 3	182-188
1. Relays	182-188
1.1 Overview of relay carriers	182
1.2 Fitting location and position of relays: relay carrier on right under dash panel	183
1.3 Fitting location and position of relays: relay carrier at rear left of engine compartment	184
1.4 Fitting location and position of relays: relay carrier at rear left of luggage compartment	185
1.5 Fitting location and position of relays: relay carrier on left under dash panel	186
1.6 Fitting location and position of relays: relay carrier at front left under bumper	187
1.7 Fitting location and position of relays: relay carrier at front left in engine compartment	188
804 - -Fitting locations: control units in front part of vehicle - 3	189-193
1. Control units in front part of vehicle	189-193
1.1 ABS control unit -J104-	190
1.2 Wiper motor control unit -J400-	191-193

805 - - Fitting locations: Control units in middle part of vehicle - 3	194-218
1. Control units in middle part of vehicle	194-218
1.1 Radio -R-	195
1.2 Digital exterior mirror control unit 2 -J1031-	196-197
1.3 Entry and start authorisation control unit -J518-	198-199
1.4 Portable navigation and infotainment system -J982-	200-201
1.5 Air conditioning system control unit -J301-	202-204
1.6 Control unit in dash panel insert -J285-	205
1.7 Steering column electronics control unit -J527-	206-207
1.8 Digital exterior mirror control unit -J1030-	208-209
1.9 Data bus diagnostic interface -J533-	210-211
1.10 Onboard supply control unit -J519-	212-215
1.11 Airbag control unit -J234-	216
1.12 Emergency exit control unit -J1051-	217
1.13 Operating range display control unit -J1033-	218
806 - - Fitting locations: Control units in rear part of vehicle - 3	219-233
1. Control units in rear part of vehicle	219-233
1.1 High-voltage charge current distributor -SX4-	220
1.2 Telematics control unit -J499-, to April 2014	221
1.3 Data recorder -J1063-, from April 2014	222-223
1.4 Charge voltage control unit for high-voltage battery -J966-	224-225
1.5 Automatic glow period control unit -J179-	226-227
1.6 Parking aid control unit -J446-	228
1.7 Engine control unit -J623-	229-230
1.8 Cooling fan control unit -J1032-	231
1.9 Fuel pump control unit -J538-	232-233
807 - -Fitting locations: Coupling points - 3	234-255
1. Coupling points	234-255
1.1 Coupling point in engine compartment -TM-, air conditioner unit	234
1.2 Radiator fan coupling point	235
1.3 Air conditioner compressor coupling point	236
1.4 Coupling point on front left door -TTVL-	237
1.5 Coupling point for side turn signal in front left door	238
1.6 Coupling point on front right door -TTVR-	239
1.7 Coupling point for side turn signal, front right door	240
1.8 Coupling points in front left door	241
1.9 Coupling points in front right door	242
1.10 Coupling point for front left seat -TSVL-	243
1.11 Coupling point for roof, centre -THM-	244
1.12 Coupling point on dash panel, right -TCPR-	245
1.13 Coupling point for engine compartment cooling fan -V116-	246
1.14 Coupling point on left B-pillar, bottom -TBL-	247
1.15 Coupling point on engine, top right -TMOR-	248
1.16 Coupling point in engine compartment, right -TMR-	249
1.17 Coupling point in engine compartment, rear right	250
1.18 Coupling point on rear lid -THK-	251
1.19 Coupling point on rear cross member, left -TAQL-	252
1.20 Coupling point on rear cross member, right -TAQR-	253
1.21 Coupling point for mechatronic unit for dual clutch gearbox -J743-	254
1.22 Coupling points on hybrid battery unit -AX1-	255