



Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	2
2.1 Technical data, gearbox	2
2.2 Calculating overall gear ratio "i"	8
3 Overview - power transmission	10
3.1 Overview - power transmission	10
4 Repair notes	12
4.1 General repair instructions	12
5 Electrical components	15
5.1 Overview of fitting locations – electrical components, manual gearbox	15
5.2 Overview of fitting locations – electrical components, clutch mechanism	15
30 - Clutch	16
1 Clutch operation	16
1.1 Assembly overview - pedal cluster	16
1.2 Assembly overview - clutch hydraulics	18
1.3 Assembly overview - clutch release mechanism	20
1.4 Removing and installing clutch pedal switch F36	22
1.5 Removing and installing mounting bracket for clutch pedal	22
1.6 Removing and installing clutch pedal with mounting bracket removed	24
1.7 Removing and installing over-centre spring with mounting bracket removed	25
1.8 Removing and installing clutch master cylinder	26
1.9 Removing and installing clutch slave cylinder	31
1.10 Bleeding clutch mechanism	33
2 Clutch	35
2.1 Assembly overview - clutch	35
2.2 Removing and installing clutch	37
34 - Controls, housing	40
1 Selector mechanism	40
1.1 Installation position - selector mechanism	40
1.2 Assembly overview - gear knob and cover	42
1.3 Assembly overview - Gear lever and selector housing	43
1.4 Assembly overview - selector lever and selector housing, as of model year 2007	45
1.5 Assembly overview - selector cables	47
1.6 Removing and installing selector mechanism	49
1.7 Distinguishing between selector mechanisms	51
1.8 Adjusting selector mechanism in neutral, selector gate for 1st and 2nd gears	52
1.9 Adjusting selector mechanism with 2nd gear engaged	55
1.10 Renewing oil seal for selector shaft	59
1.11 Removing and installing relay lever	60
2 Removing and installing gearbox	63
2.1 Specified torques for gearbox	63
2.2 Removing gearbox	63
2.3 Removing gearbox, 2010▶	69
2.4 Installing gearbox	76
2.5 Installing gearbox, 2010▶	80
3 Transporting gearbox	86
3.1 Transporting gearbox	86
4 Gear oil	87



4.1	Checking gear oil level	87
5	Dismantling and assembling gearbox	88
5.1	Schematic overview - gearbox	88
5.2	Assembly overview - cover for gearbox housing and 5th gear	90
5.3	Assembly overview - gearbox housing and selector mechanism	91
5.4	Assembly overview - selector unit	92
5.5	Assembly overview - input shaft, output shaft, differential and selector forks	93
5.6	Assembly overview - selector forks	94
5.7	Dismantling and assembling gearbox	95
5.8	Dismantling and assembling selector unit	108
5.9	Dismantling and assembling selector forks	109
5.10	Removing cover for gearbox housing and 5th gear	113
5.11	Installing cover for gearbox housing and 5th gear	120
6	Gearbox housing, clutch housing	124
6.1	Assembly overview - gearbox housing	124
6.2	Assembly overview - clutch housing	125
6.3	Repairing gearbox housing	127
6.4	Repairing clutch housing	134
35	Gears, shafts	141
1	Input shaft	141
1.1	Assembly overview - input shaft	141
1.2	Dismantling and assembling input shaft	142
2	Output shaft	149
2.1	Assembly overview - output shaft	149
2.2	Dismantling and assembling output shaft	151
2.3	Adjusting output shaft	163
3	Reverse shaft	168
3.1	Assembly overview - reverse shaft	168
3.2	Dismantling and assembling reverse shaft	169
39	Final drive - differential	171
1	Oil seals	171
1.1	Overview of fitting locations - seals	171
1.2	Renewing left oil seal	172
1.3	Renewing right oil seal	173
1.4	Renewing input shaft seal	177
2	Differential	180
2.1	Assembly overview - differential	180
2.2	Dismantling and assembling differential	182
2.3	Adjusting differential	185
3	Adjustment overview	190